




# Using Your Product Safely

Thank you for purchasing the TAMA Drum Set. In order to use your product safely and avoid accidents and injuries, please read these instructions carefully before using the drum set, and keep them in a safe place for future reference. The drum set includes drums and stands in various sizes, as well as cymbals and other accessories. The overall set is heavy and bulky. When considering the location where the drum set will be installed for everyday use, safety precautions should be carefully observed. If the drum set is used in a school or a family environment where there are small children, make sure guidance is provided by an instructor or a parent in the proper way to handle the equipment.

**Display Symbols** These instructions contain symbols which are intended to alert the user and others to the possibility of danger or injury. Please make sure you understand the meanings of these symbols before reading the instructions.

	<b>WARNING</b> If this symbol is ignored and the equipment is used improperly, fatal injury to persons or serious damage could occur.
	<b>CAUTION</b> If this symbol is ignored and the equipment is used improperly, there is a danger of injury to persons handling the equipment, and material damage could occur.
	<b>NOTE</b> If this symbol is ignored and the equipment is used improperly, the performance of the equipment may be adversely affected, or functions may not work as designed.
• Please be aware that the manufacturer takes no responsibility for any malfunction or problem with this product that may result from external causes.	

## Precautions When Installing the Equipment

### **WARNING**

 
#### **Make sure screws are tightened securely.**

Screws should be tightened securely to keep the equipment from falling over or dropping during performance. On models where gears are used for angle adjustments, make sure the gears are meshed before securing them. Applying excessive force without the gears being meshed properly could result in vibration during performance which could cause the cymbals or any other equipment to fall from their stands.

### **CAUTION**


#### **Be careful not to scratch or damage the floor surface.**

The bass drum spurs, hi-hat stands, and bass drum pedals have sharpened anchors which prevent them from slipping during performance. Handle these carefully when setting up the equipment, in order to avoid injury. Also, the rubber tips used on the stands and on the legs of the bass drum and the floor tom may cause discoloration of the floor surface if left in place for long periods of time. We recommend installing the drum set on a thick carpet or a specially designed drum mat in order to avoid damage to the floor surface, the carpet, and other flooring.

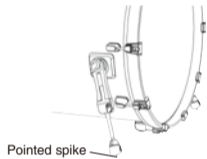

#### **Make sure the equipment cannot fall over.**

 The drum hardware is supported by means of a tripod. When installing the drum set, make sure the legs of the tripod are opened wide enough to keep the equipment from falling over. With a boom stand, if the boom section is being used in the extended position, one of the tripod legs should be extended in the same direction as the boom section, for added stability. If you are using clamps on the cymbal stands and attaching tomtoms, the tom-toms should be set up with one leg extended directly upwards, for added stability.

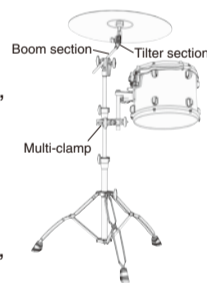

## Precautions When Handling the Equipment

### **WARNING**

#### **Do not use the equipment for any purpose other than performance.**

The individual drums, as well as the stands and other accessories, contain many metal parts. The stands are particularly heavy, and can be dangerous if used for anything other than the intended purpose.

#### **Do not allow children or others to play near a drum set.**

Numerous stands are set up around a drum set. Children or others playing near a drum set are at risk for bumping into the components of the drum set or tripping and falling over them. Please be particularly careful not to allow children to play near a drum set.

#### **Stay away from the drum set if an earthquake occurs.**

A strong vibration such as an earthquake can cause the drum set to shift or fall over. If an earthquake should occur, be sure to stay well clear of the drum set.

#### **Never use drum sticks for anything other than playing the drums.**

Drum sticks and wire brushes are intended for playing the drums. Never hit people with them or throw them at people. This can be extremely dangerous.

#### **Be careful of broken drum sticks.**

Drum sticks are made of wood. If they break while you are performing, fragments and splinters can go flying, possibly causing injury.

### **CAUTION**

#### **Be careful not to bother others.**

Playing the drum set produces a lot of loud sounds and vibration. Be careful to arrange practice times so as not to bother others nearby.

#### **Be careful of oil on screws and bolts.**

The screws in the main unit and the stands are lubricated with grease. When transporting or setting up the equipment, be careful not to get grease on your clothing.

#### **Watch out for rust and deterioration of metal parts.**

Metal parts become rusty and scratched through use. Be careful not to scratch yourself on a rusted or scratched part. Do not operate a drum pedal or hi-hat stand pedal with your bare feet.

#### **Always support the upper part of a tom holder or stand when adjusting it.**

 
Loosening a screw too quickly when adjusting the height or angle of a tom-tom or a cymbal may allow the tom or cymbal to fall, pinching or injuring your fingers. Use one hand to securely support the tom-tom or tilter while you loosen the screw with care.

#### **Be careful when folding up the tripods.**

When storing the tripods of stands and other equipment, be careful not to let your fingers get pinched or caught.

#### **Do not put fingers or other objects into pipes.**

When removing pipes for storage or when setting up the equipment, your fingers could be injured if you put them into the pipes. Never put your fingers into pipes unless absolutely necessary, and then be extremely careful.

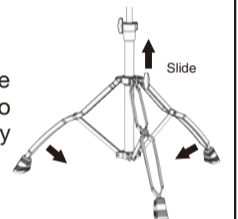

#### **Be careful of the projecting parts of stands.**

Stands have a lot of protruding parts such as screws and boom arms. When setting up the equipment, be careful not to bump these projecting parts with your face or head, to avoid injury.

#### **Never stand on the drum chair or use it as a stepping stool.**

 
Standing on the drum chair or using it as a stepping stool could cause it to fall over or break. Never use the drum chair for anything other than its designated purpose, which is for sitting while playing.

#### **Do not sit on the drum seat when adjusting its height.**

Adjusting the height of the drum seat while sitting on it can cause accidents such as pinched fingers or the seat dropping suddenly, causing back injuries. When adjusting the height, always stand up from the seat.

#### **Be careful of snappy wires suddenly giving way.**

The snappy wires (resonating wires) on the back of the snare drum are consumable items and wear out over time. If a wire comes loose at one end and is left hanging, it can prick your fingers or snap into your eye when you are moving or setting up the equipment. Use nippers or another tool to cut off protruding wires, and replace them with new ones as quickly as possible.

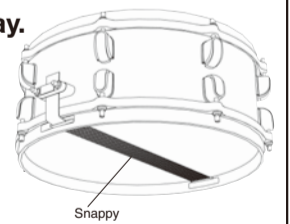

## Precautions Regarding Storage

### **NOTE**

#### **Avoid locations with high temperatures and high humidity.**

Leaving the drum set in a car, or in a place where it is exposed to direct sunlight for a long period of time, can cause the covering sheet to come loose, or the plywood on the drum shell to come off. In order to maintain the superior performance of the drum set, store it carefully in a safe place.

#### **Metal parts should be wiped with a dry cloth from time to time.**




To prevent rust, metal parts of the drums and stands should be wiped with a dry cloth from time to time.

If you have any questions or concerns regarding this product, please feel free to consult your nearest dealer.


# 安全使用须知

衷心感谢您本次购买TAMA鼓产品。为了安全使用本产品、防止意外事故或伤害，使用前请务必阅读本说明书。另外，请将本说明书妥善保管在安全的地方。架子鼓由多个尺寸不一的鼓、支架与镣片组成，整体非常沉重。为了安全使用本产品，请在室内的放置场所与日常使用方面多加注意。另外，儿童在学校或在家庭使用时，请老师或家长务必一旁指导，以便正确使用。

**关于符号** 为了安全正确使用本乐器，避免对您本人或他人造成伤害或带来财产损失，本说明书使用以下符号标示出相关事项。请牢记相关内容后再阅读使用说明书。


	<b>警告</b>	此符号意为如果忽略本符号并错误使用，有可能造成人员死亡或重伤。
	<b>注意</b>	此符号意为如果忽略本符号并错误使用，有可能造成人员受伤，或导致物品损坏。
	<b>请注意</b>	此符号意为如果忽略本符号并错误使用，有可能无法发挥本产品应有性能，或导致功能无法使用。
◎由外部因素导致的本乐器故障、性能不佳等损害，本公司不负任何责任，敬请谅解。		

## 安装注意事项

 **警告**

 
**请务必拧紧螺丝**

为了防止演奏过程中翻倒或掉落，请务必拧紧螺丝。此外，对于使用齿轮进行角度调整的型号，请确保齿轮牢固咬合后进行固定。如果在未咬合状态下强行固定，演奏时可能因振动导致镣片等部件掉落。

 **注意**

**请注意不要损坏地板**


底鼓的脚部、踩镣架、鼓踏板设有尖头，以防演奏时移动。安装时请务必小心以免受伤。另外，支架、底鼓、落地鼓的脚部均装有橡胶脚垫，长时间放置在同一位置可能导致地板染色。为了避免弄脏或损坏地板、地毯、榻榻米等，建议您先垫一层厚实的地毯或专用鼓垫后再安装本产品。

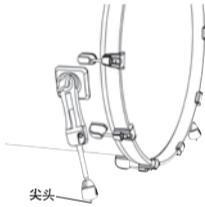

尖头


**请注意防止翻倒**

鼓硬件由三脚架支撑。安装时请将三脚架完全展开后使用。对于斜杆型支架，当斜杆部伸长使用时，为增加稳定性，请将三脚架中的一只脚置于与斜杆部相同的方向。同样，使用夹子将中鼓安装在镣架上时，请将中鼓的一只脚安装在镣架正上方。



斜杆部 倾斜部 多功能夹

## 使用注意事项

 **警告**

**请不要用于除演奏以外的任何目的**

本产品包括多个鼓乐器，各支架还使用了大量金属部件。特别是各支架沉重且危险，请不要用于除演奏以外的任何目的。

**在架子鼓周围“玩耍”是很危险的**

架子鼓周围安装了很多支架。在其周围玩耍可能会撞到身体或被绊倒。请特别注意不要让儿童在架子鼓周围玩耍。

**地震时请不要靠近架子鼓**


地震带来的剧烈晃动可能导致架子鼓移动或翻倒。地震时请不要靠近架子鼓。

**请不要将鼓棒用于除演奏以外的任何目的**

鼓棒或钢丝鼓刷是打鼓演奏用品。绝对禁止用于敲打他人、投掷等危险行为。

**请小心鼓棒折断的碎片**

鼓棒是木制品。演奏时有折断、碎片飞散的可能性，敬请注意。

 **注意**

**请注意不要打扰邻居**

演奏架子鼓时伴随着较大音量和振动。请合理安排练习时间以免打扰邻居。

**请注意螺丝部件的润滑油**

鼓身和各支架的螺丝上涂有润滑脂用作润滑剂。搬运和安装时有可能沾染在衣物上，请务必注意。

**请注意金属部件的生锈或老化**

金属部件在使用过程中可能会生锈或损坏。请注意不要刮擦生锈或损坏的部分，以免受伤。此外，请不要赤脚踏踏鼓踏板或踩镣架的踏板。

**调整鼓支架、支架时，请务必支撑住上半部分**

 
调整中鼓或镣片的高度、角度时，如果快速松开螺丝，中鼓或镣片可能会掉落，住手指。请用单手牢固支撑住中鼓或倾斜部，缓慢地拧松螺丝。

**请小心折叠三脚架部分**

收起各支架的三脚架时，握住支架的手指有被夹到的危险，敬请注意。

**请注意管内壁**

拔出管并收起、或安装需拔出管等情况下，管的内壁可能伤到手指。请不要有意或无意将手指伸入管内部。

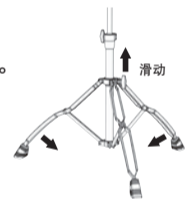

滑动

**请注意各支架的凸起部分**

各支架上均有螺丝、斜杆臂等多个凸起部分。安装时请小心不要打到脸部或头部。

**请不要站在鼓凳上，也不要将其用作垫脚台**

 
如果故意站在鼓凳上，或将其用作垫脚台，都可能导致其翻倒或损坏。鼓凳只能用于打鼓演奏。

**调整鼓凳高度时，请先站起后再进行调整**

如果坐在鼓凳上调整高度，上下活动部分可能会夹到手指，或急速下跌导致伤到腰部。调整高度时，请从鼓凳上起身后进行切实调整。


**请注意断裂的沙带（响弦）**

小鼓内侧的沙带（响弦）为易耗品。如果沙带钢丝从一侧断裂垂下，移动或设置小鼓时可能会扎到手指或眼睛，导致受伤。请用钳子等工具切断，并尽快更换新沙带。

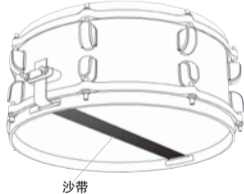

沙带

## 存放注意事项

 **请注意**

**请避免高温、潮湿场所**

将架子鼓长时间存放在车内或阳光直射处，可能会导致覆膜分离、鼓外层胶合板脱落。请务必注意存放位置，以免影响乐器性能。

**请经常使用干布擦拭金属部件**

为了防止生锈，请经常使用干布擦拭鼓身的金属部件和各支架。